


# SNAP-SEAL CRIMP F CONNECTOR STRIP INSTRUCTIONS

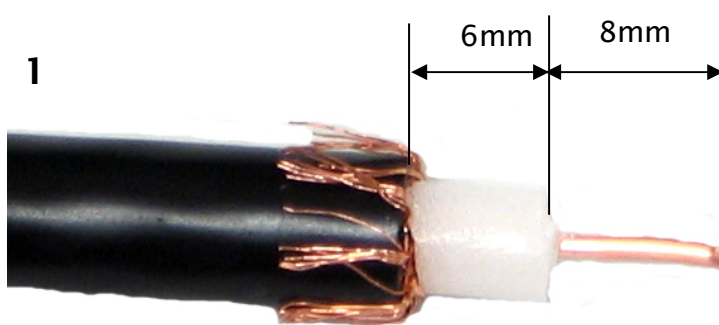

Strip the cable as above and fold back the all of the braid wires over the outer jacket. (Ensure no braid wires remain in contact with the centre core)



Push and twist the connector onto the cable – until the inner dielectric is level with the inner step of the fitting.  
(This will force the inner tube of the connector under the cable jacket)



A successful crimp is water tight and will not pull off the cable.  
(Although we still advise the use of a weather boot or self amalgamating tape)